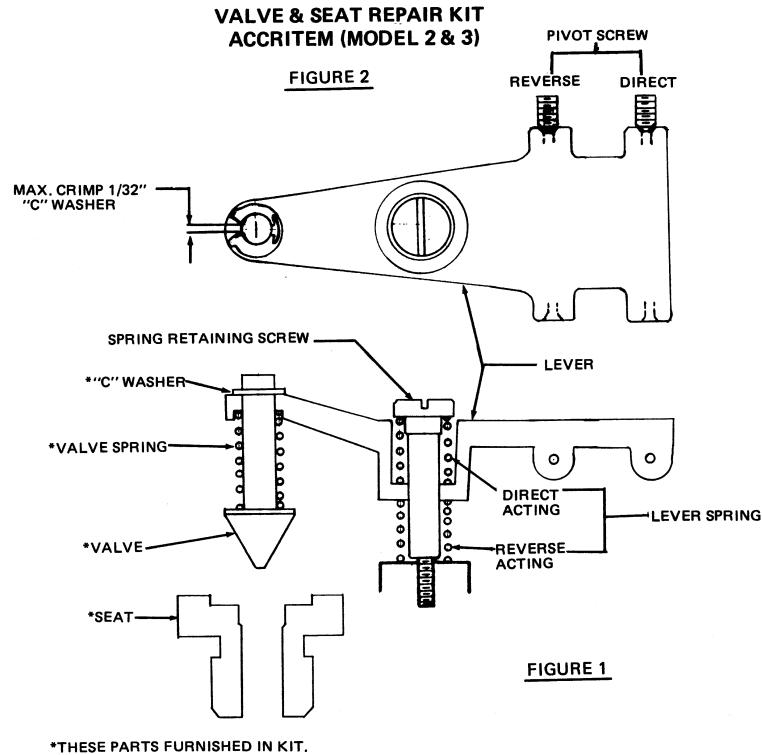


POWERS

A WATTS INDUSTRIES CO.

INSTALLATION INSTRUCTIONS**VALVE SEAT AND REPAIR KIT
Accritem (Model 2 and 3)****INSTALLATION INSTRUCTIONS**

1. Turn adjusting knob clockwise to remove tension.
2. Loosen set screw and remove knob.
3. Remove six (6) cover screws and the cover.
4. Remove spring retaining screw, and lever spring.
5. Loosen two (2) pivot screws, and remove lever assembly.
 - a. Remove existing valve and valve spring form lever. On older models, the retaining washer was soldered to the valve. Later construction has a "C" washer with jaws crimped over the valve stem.
 - b. Assemble new spring, valve and retaining washer onto lever as shown on Figure 1. Crimp jaws of retaining washer to dimension shown on Figure 2.
6. Replace old valve seat with new seat. Use 7/16" hex socket wrench.
7. Reassemble parts in reverse order; take care that pivot screws are snug without binding.

CALIFORNIA PROPOSITION 65 WARNING

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (Installer: California law requires that this warning be given to the consumer.)

For more information: www.wattsind.com/prop65

POWERS

A WATTS INDUSTRIES CO.

USA office: Phone: 800.669.5430 • Fax: 847.824.0627

www.powerscontrols.com

Canadian office: Phone: 888.208.8927 • Fax: 888.882.1979

© 2002 Powers, a Watts Industries Co.